

MODIFICATION OF A ONETOUCH PRODUCT

Example: Updating format


1. Select OneTouch key



Start Menu:


Press the OneTouch key you wish to modify twice.

2. Select properties

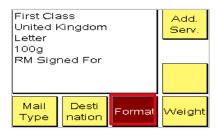


Select the property you wish to change. Example: "Format".

3. Select new format

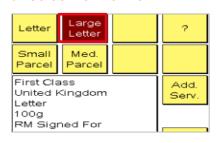

Select the new format. Example: "Large Letter".

4. Save the modification

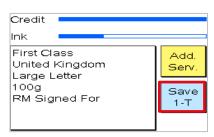

Select the "Save 1-T" key on the right to save the modification.

5. Updated OneTouch key



Start Menu:

The OneTouch key is updated now.