



PRINT ALIGNMENT MATRIX F32-F82

1. Select further information

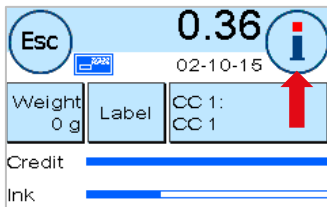


Start Menu:
Press the „i“ key top right.

6. Print Alignment X

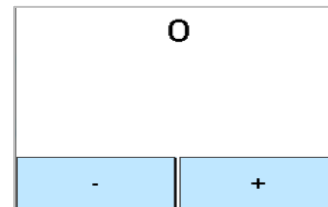


Move to setting 0 (example) with the - and + keys. Confirm it with „ENTER“.

2. Select Printer Settings

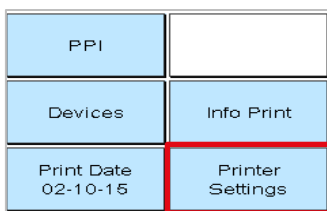


Main Menu:
Select „Printer Settings“ on the right.

7. Print Alignment Y

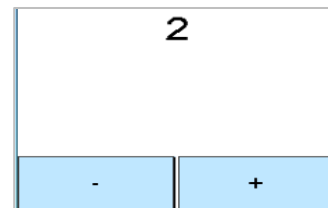


Move to setting 2 (example) with the - and + keys. Confirm it with „ENTER“.

3. Select Print Alignment

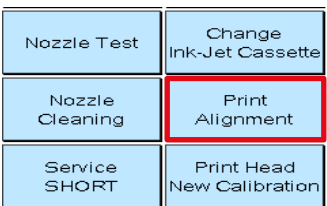


Menu Printer Settings:
Select „Print Alignment“.

8. Repeat the Test Print

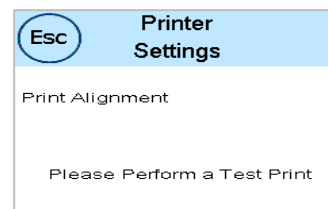


Repeat the Test Print.

4. Perform a Test Print

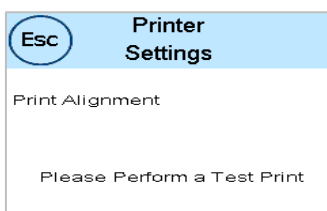


To perform a Test Print insert a letter to print alignment graphic.

9. Confirm Test Print

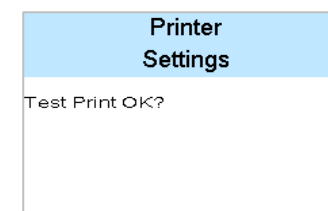


If the Test Print is correct, press „YES“ to confirm the settings. Otherwise press „NO“ to repeat.

5. Test Print

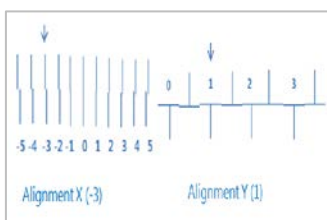

The Test Print shows the current settings. The arrows should point to where the lines appear straightest.
Example:
Is: X=-3 / Y=1
Should: X=0 / Y=2

10. Print Alignment label

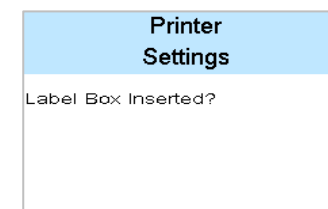

If the Label Box is inserted, perform a Test Print for the Label Box. Align the print also here if required (only X).