
Fx Series 5 Quick Installation Guide

FRAMA mail. message. managed.

Machine components:



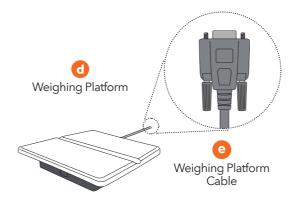


 










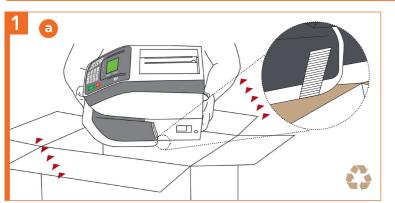




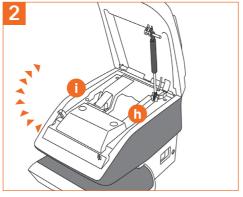

Lift the cover of the machine to reveal the ink cartridge (h) and meter (i) bays.

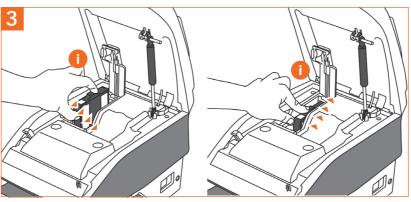

Open the cover. Place the meter (i) into the meter compartment and push backwards until it fits securely into position. Close the cover.

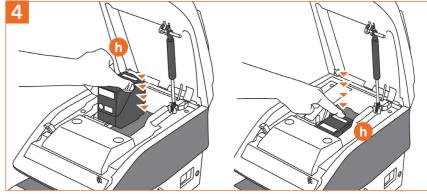


Insert the ink cartridge (h) at an angle into the machine with the 'TOP' and 'LOCK' stickers facing upwards. Push the ink cartridge (h) towards the back of the machine until you hear a 'click' - close the cover of the machine.




Lift machine slightly on the left hand side and align the hooks to attach the feeding table (b) – align the catch tray (c) to the right hand side of the machine.




Lower weighing platform release panel at the back of the machine. Place weighing platform (d) on top of the machine and slide forward to lock. Lift panel to secure and clip cable into place.

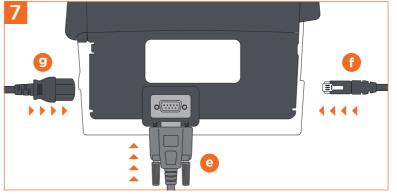


Connect the weighing platform connector (e) into the COM PORT on the back of the machine. Then connect the LAN cable (f) and power cable (g) to each side of the machine.

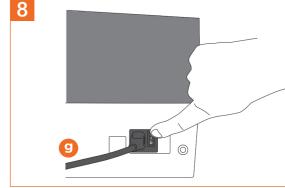


Turn on the machine using the switch behind the power cable (g) and follow the steps on screen.

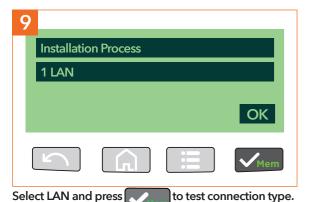

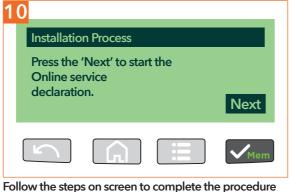

Your machine is now ready to use. Please turn over for your **Quick Start Guide**.


For more information or if you experience any issues, please visit: www.frama.co.uk/Fx5

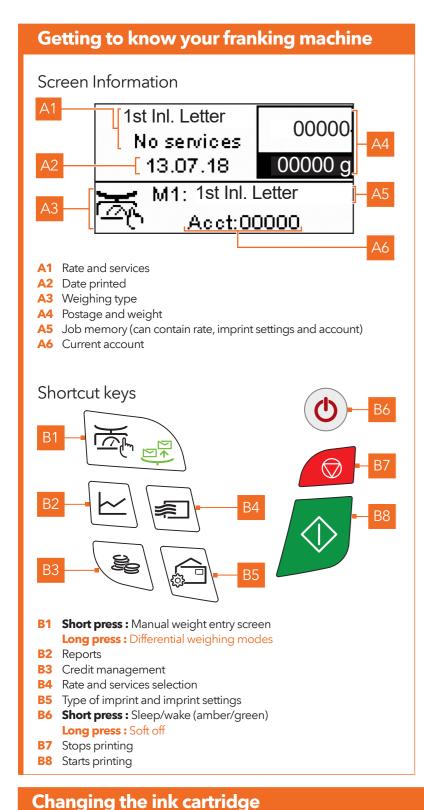



heads.


Quick steps to franking your mail

To reset the machine press: **Short Press:** to clear the information on the screen ing platform function **Short Press:** to wake the machine up with default settings

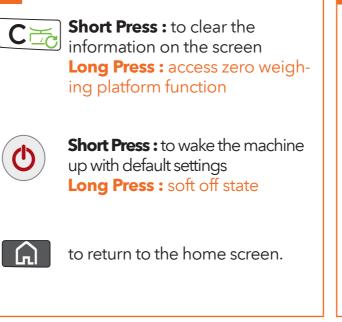

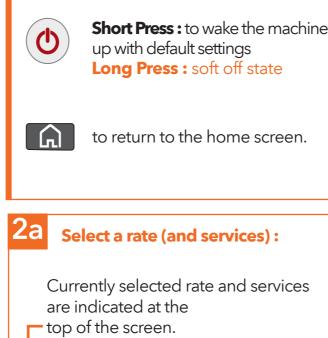

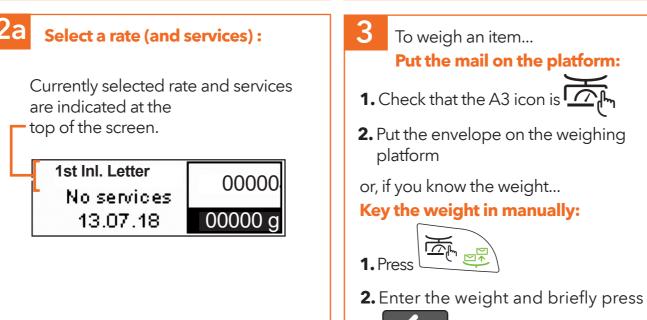


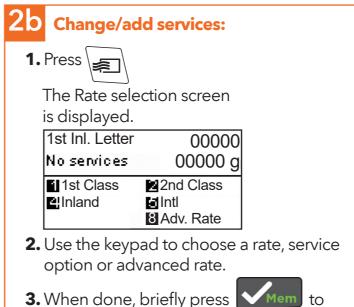



home screen.

To weigh an item...

Put the mail on the platform:

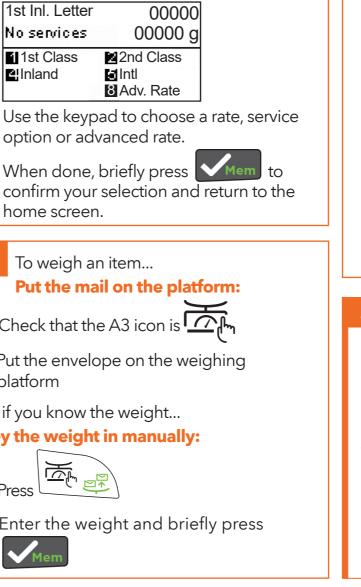

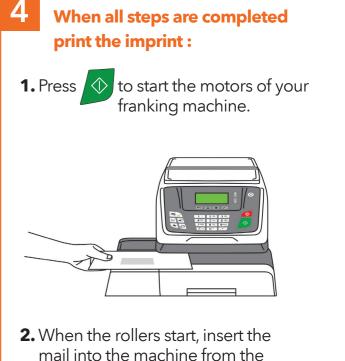

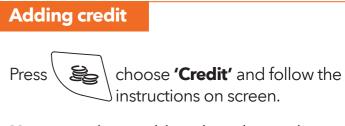

left hand side.

Note: in order to add credit to the machine there must be funds available in your postage account.







to stop the motor.

2. Under the base, lift up the release handle and use your other hand to remove the jammed envelope.





A0141567/A - 15/03/2021

To access your full user guide, please visit: www.frama.co.uk/Fx5