

 
SINGLE WEIGHING

1. Sort the letters



Sort the letters according to the format.

2. Determine the basic tariff




Start Menu: Determine the basic tariff of the letters.

3. Weighing letter



Place a letter on to the scales.

 4. Calculation of the postage value




The weight will be measured and shown. At the same time the postage value will be calculated.

5. Franking the letter



Frank the letter.

Remark

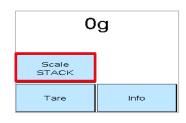

To switch between single and stack weighing press:

- -Start menu: "i"
- -Main Menu: "Devices"
- -Menu Devices: "Scale"
- "Scale SINGLE ITEM" or "Scale STACK" key to activate the mode.