

REPLACING LABELS FOR THE MATRIX F62 / F82

1. Open the label dispenser



Open the label dispenser by lifting up the cover flap.

2. Pull up the hook clamp



Pull the hook clamp on the left.

3. Remove the empty label box



Hold the hook clamp in this position and remove the label box.

4. New label box



Pull the hook clamp up again and push the left end of the new label box under the hook clamp. Use your finger to fix the labels in the box.

5. Close the label dispenser



Release the hook clamp and close the label dispenser.