


STACK WEIGHING

1. Sort the letters

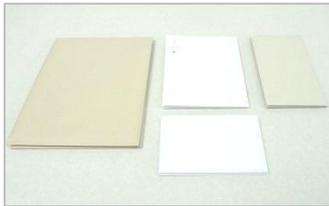

Sort the letters according to the format.

6. Frank the letter



Frank the letter, then remove next letter from stack.

2. Put the stack of letters on the scales



Put the stack of letters on the scales.

3. Determine the basic tariff

Credit	[Progress bar]	
Ink	[Progress bar]	
1st Class Let 100g UK No Services	2nd Class Let 100g UK No Services	
1st Class Lge 100g UK No Services	2nd Class Lge 100g UK No Services	

Star Menu:
Determine the basic tariff of the letters.

4. Remove the letter



Remove first letter from the stack.

5. Calculation of postage value

First Class United Kingdom Letter 100g	<table border="1"> <tr> <td>Add. Serv.</td> </tr> <tr> <td>Stack 61 g</td> </tr> </table>	Add. Serv.	Stack 61 g
Add. Serv.			
Stack 61 g			
Mail Type	Desti nation		

The weight of the removed letter will be used to calculate the correct postage.

Remark

0g	
Scale STACK	
Tare	Info

To switch between single and stack weighing press:

- Startmenu: "i"
- Main Menu: "Devices"
- Menu Devices: "Scale"
- "Scale SINGLE ITEM" or "Scale STACK" key to activate the mode.